


# Connector Pinout

## DOF-5 Stage Pinout

Pin Number	Function			Pinout Diagram
	RS-232	RS-485	CAN	
1	Factory Use Only			
2	Factory Use Only			
3	NC	Z TxD-	NC	
4	TX	Y TxD+	NC	
5	NC	B RxD-	CANH	
6	RX	A RxD+	CANL	
7	Supply Return			
8	Motor Bus Supply			
9	Factory Use Only			
10	Factory Use Only			
11	Digital Input A (Step)			
12	Digital Input B (Direction)			
13	Digital Output			
14	Digital Return			
15	Supply Return			
16	Logic Supply			
DOF-5 Connector: Harwin G125-MH11605L7P Mating Connector: Harwin G125-2241696F1				

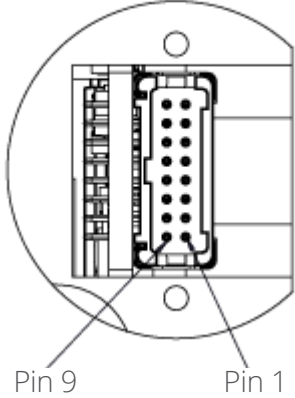